



12v-24v RFID Lift Access Control

Add A User	
ATTENTION: Please note the master code does NOT unlock the door	
RELAY 1 (from 001 to 999 users)	
Enter the master code twice or swipe the master card once (default code 1234)	Long BEEP + right LED will turn yellow
Enter *001	Long BEEP + right LED will turn yellow
Enter the position from 001to 999 (3 mandatory digits)	Left LED will turn green + right LED will flash yellow
If CARD: swipe the card once If CODE: enter code once	Long BEEP + left LED will turn green + right LED will flash yellow
Enter ##	Right LED will turn green

Add Cards in batches	
This function allows to register cards in batches	
Enter the master code twice or swipe the master card once (default code 1234)	Long BEEP + right LED will turn yellow
Enter *901	Short BEEP + right LED will turn yellow
Enter the position from 001 to 999 (3 mandatory digits)	Long BEEP + right LED will turn yellow
Enter the second position 001 to 999 (3 mandatory digits)	Short BEEP + right LED will turn yellow
SWIFT THE CARDS ONE AFTER THE OTHER	Long BEEP + right LED will turn yellow
Enter ##	Right L.E.D will turn Green




12v-24v RFID Lift Access Control

How To Programme and Remove Key Fob's

Return to Factory settings	
This operation removes all user codes + cards + master card. Default code will be 1234 again	
Enter the master code twice or swipe the master card once (default code 1234)	Long BEEP + right LED will turn yellow
Enter *899	Long BEEP + right LED will FLASH yellow
Enter ##	Right LED will turn Green

SETTING OF THE UNLOCKING TIME RELAY 1 (FROM 01-99 SECONDS)	
Enter the master code x 2 or swipe card x 1 code 1234	long BEEP + right L.E.D will turn yellow
Enter *1	right L.E.D will flash yellow
Enter the 2 - digits value from 01 to 99 sec	long BEEP + right L.E.D will turn yellow
Enter ##	right L.E.D will turn green

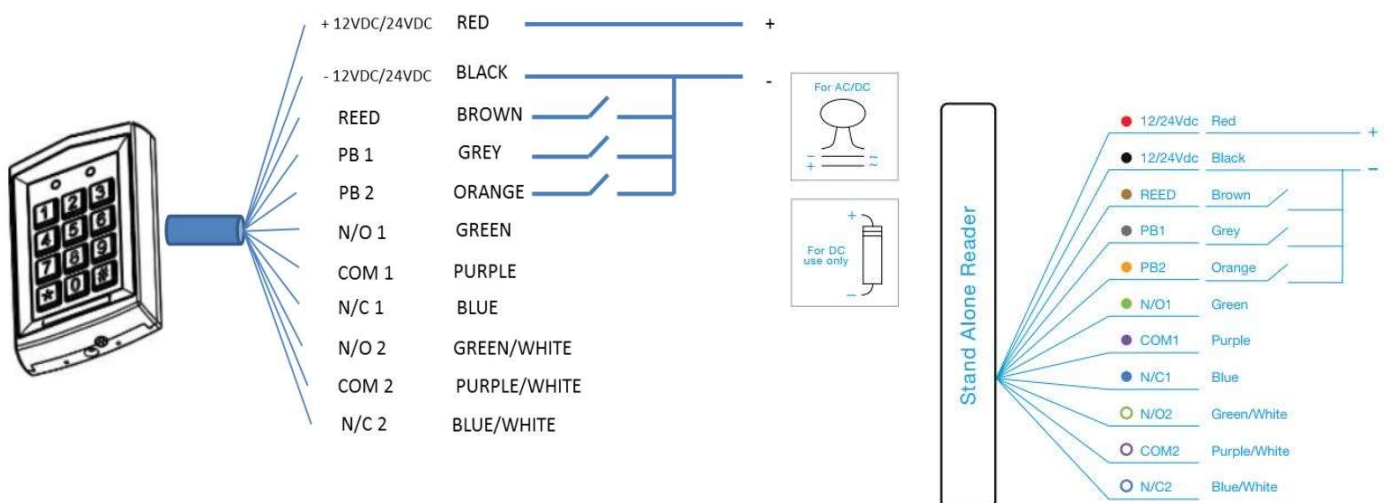

RED	+	GREY	PB1	PURPLE	COM1	PURPLE/WHITE	COM.2
BLACK	-	ORANGE	PB2	BLUE	N/C1	BLUE/WHITE	N.C.2
BROWN	REED	GREEN	N/O1	GREEN/WHITE	N/O2		